

# CARE AND MAINTENANCE GUIDE

To ensure the absolute best results when caring for your meissen products, please follow the instructions in the guide carefully.



## AERATOR MAINTENANCE

The Aeromax advanced aerator will have to undergo occasional cleaning; to do so, unscrew the aerator in an anti-clockwise direction. Remove any impurities and small particles that may have collected by rinsing with clean water.



## CARING FOR YOUR MEISSEN PRODUCT

 <p>Never use abrasive or coarse surface materials to clean.</p>	 <p>Drying the surface with a soft cloth after rinsing reduces water deposits.</p>	 <p>If ever chloride containing cleaners are used (not recommended), ensure you rinse the surface immediately to prevent corrosion.</p>
 <p>Lime-scale deposits may be more visible on the powder coated finish around the aerator housing and dome cover.</p>	 <p>Ensure to clean your stainless steel faucet at least once a week. If you live on the coast, at least every 2 days.</p>	 <p>Do not use any aggressive cleaning agents containing ingredients such as chlorine, bleach, formic acid, acetic or hydrochloric acid to clean your faucet. Only warm water.</p>